

How to Upgrade Wi-Fi doorbell Firmware

Instructions

 
There are 3 methods you can choose to upgrade Wi-Fi doorbell firmware:

- (1) Upgrade in Hik-connect app
- (2) Upgrade with SD card
- (3) Upgrade with iVMS-4200

Upgrade Methods

1. Upgrade in Hik-connect App

Hik-connect will automatically detect new available firmware for Wi-Fi door bell, you can upgrade in: **device setting>> device version:**

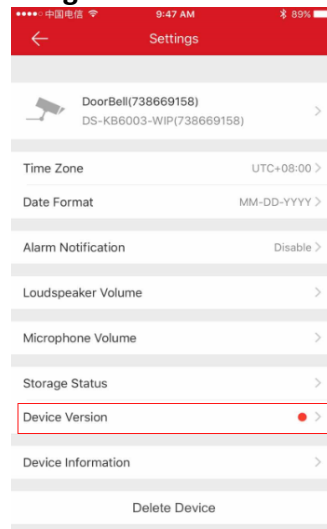


2. Upgrade with SD Card

Put the new firmware ('digicap.dav' file) into SD card root directory, insert card to Wi-Fi door bell, restart device, device will automatically upgrade and reboot.

3. Upgrade with iVMS-4200

 Make sure your computer and your Wi-Fi doorbell are in same network, using activate password to add device into iVMS-4200. If you haven't set activate password for Wi-Fi doorbell before, the default password is 'admin+Verification Code', format such as : 'adminHIKHIK'). Then you can upgrade in: **Remote Config >> System >> System Maintenance:**

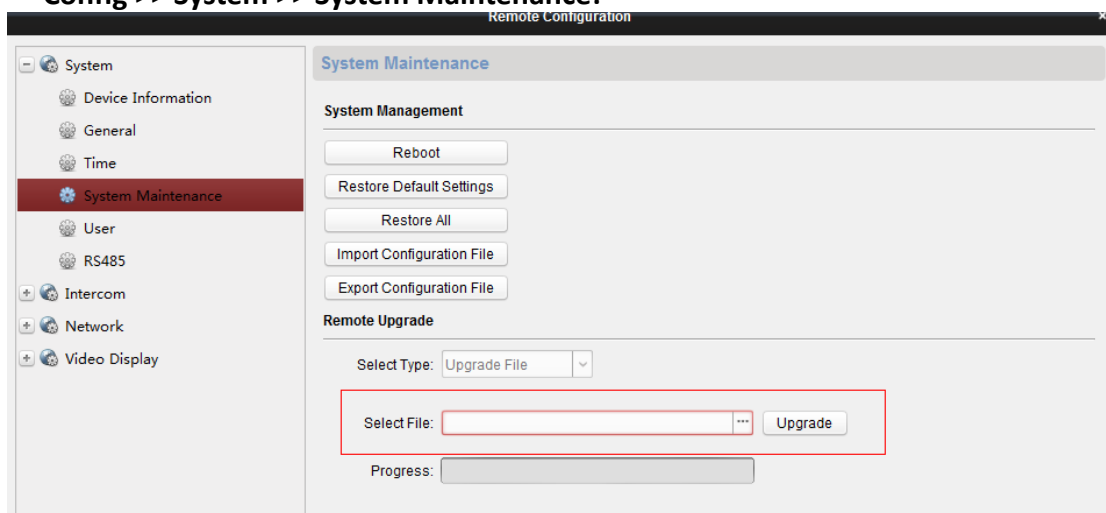

| | | | | | |
|-----------------|--|-----------------|--------|--------------|------------|
| Title: | How to Upgrade Wi-Fi doorbell Firmware | Version: | v1.0 | Date: | 17/10/2018 |
| Product: | Video Intercom | Page: | 2 of 2 | | |



First Choice for Security Professionals
***HIK*VISION Technical Support**